


Cross vest

Measure the child and choose the correct size

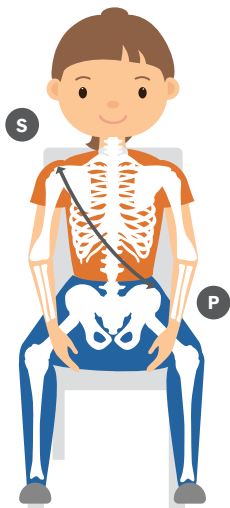

Provides a firm and flexible hold against the front and sides of the trunk. It aims to prevent the child from falling forward or sideways.

	XS	S	M	L	XL
Shoulder (S) to Pelvis (P)	200–315 mm	260–345 mm	345–450 mm	450–530 mm	530–620 mm