
Periodic inspection checklist – EN

Molift Partner 255


molift® by Etac

PI03401 - 2026-06-10 - Rev. 2.0

In accordance with ISO 10535

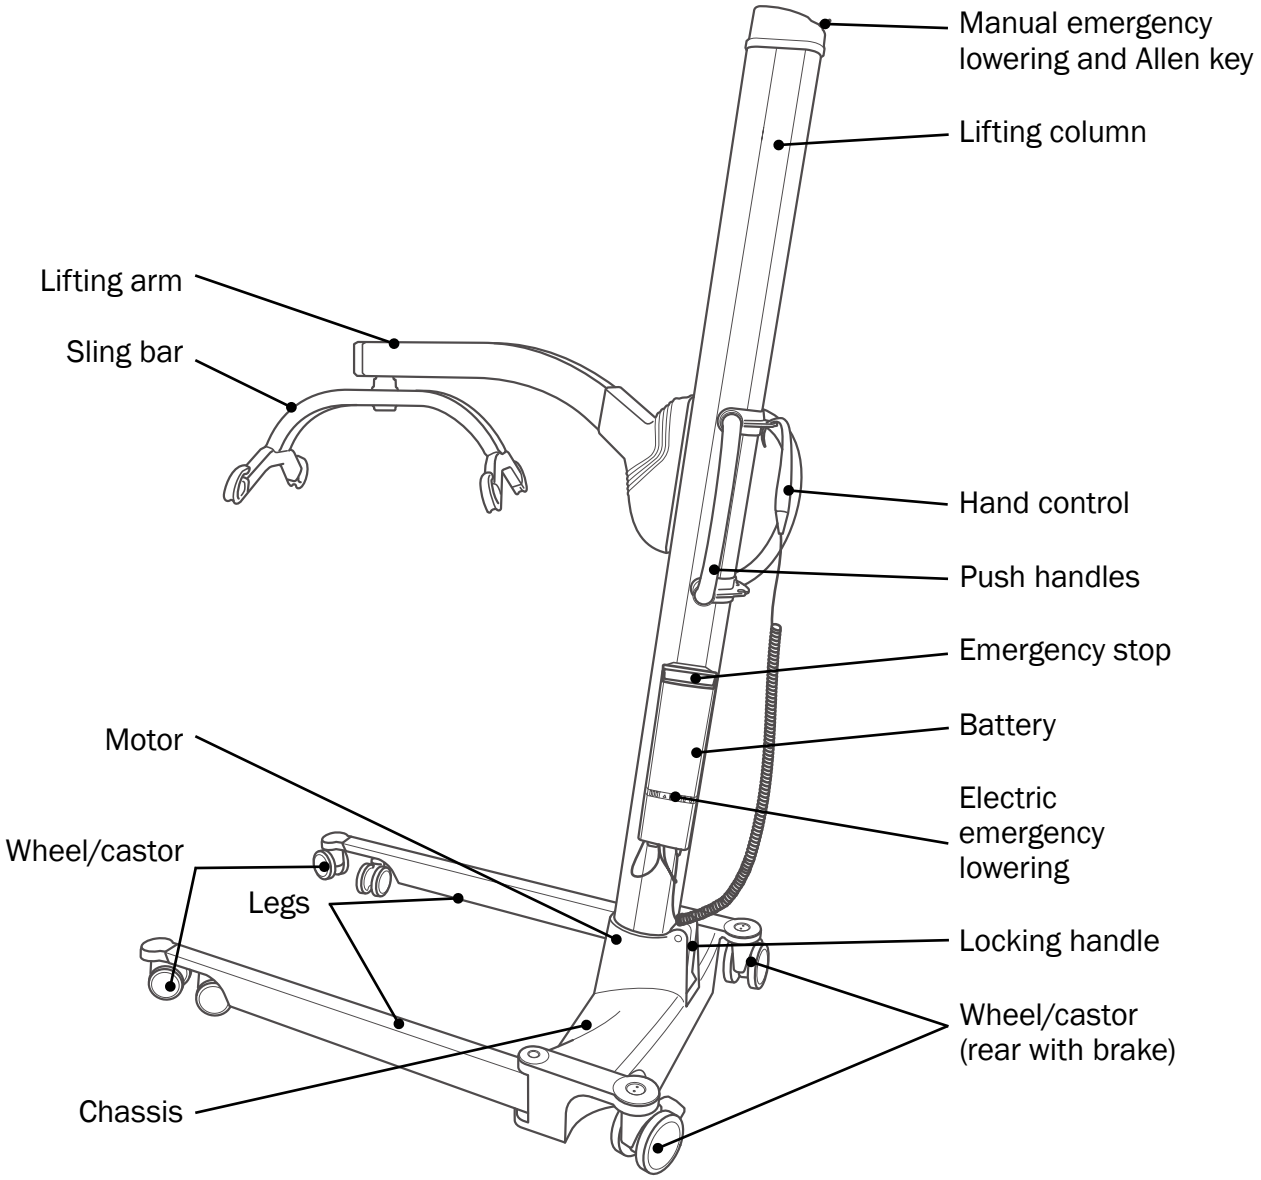


Product label

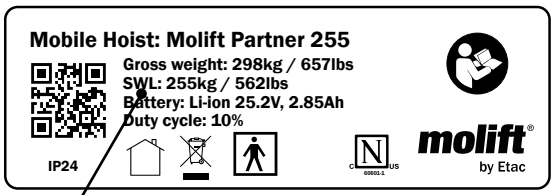

SWL value

Id-label

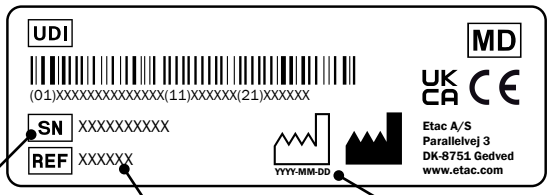

Serial no. Article no. Production date

A copy of this document is available for download at www.etac.com.

Scan QR code on product label for accessing product home page. The user manual can be found in the document section.

Article no. (see ID label):

Serial no. (see ID label):

Production Year:

Owner:

Sling shall be inspected separately and is not included in this inspection.

Service light indicator

Note colour of service light indicator:

Status	*Service light*	*Mode*
☐	(No light)	Service/Periodic inspection not needed
☐	Yellow	Order service
☐	Yellow (flash and sound when operated)	Perform service
☐	Yellow (slowly turns on and off)	Perform Periodic Inspection

Situation of use

- ☐ Home
- ☐ Hospital
- ☐ Nursing home
- ☐ Other

The periodic inspection is to be performed by a person who is suitable, properly qualified and well acquainted with the design, use and care of the hoist

The hoist's software Molift Service Tool provides option to enter date of PI and name of inspector along with additional information.
Molift recommends adding all observations/remarks concerning the hoist in the Molift Service tool for complete history log of the hoist

Visual examination

Visual examination of load bearing structure to make sure there is no damage, cracks, frays or deformation. All checkpoints must be checked to approve hoist for further use

OK	*Not OK*	
☐	☐	Lifting column
☐	☐	Lifting arm
☐	☐	Legs
☐	☐	Product label
☐	☐	Plastic covers
☐	☐	Hand control
☐	☐	Wheels/castors
☐	☐	Charger
☐	☐	Brakes on wheels/castors
☐	☐	Cables
☐	☐	Battery
☐	☐	Other electronics
☐	☐	Sling bar
☐	☐	Leg adjustment mechanism
☐	☐	No corrosion
☐	☐	Weldings
☐	☐	Instruction for use/user manual is present/available

Functional examination



Test function and check for wear and damage.
All checkpoints must be checked to approve hoist for further use

OK	*Not OK*	
☐	☐	Wheels/castors
☐	☐	Rear wheel/castor brakes
☐	☐	With legs in inner position (parallel): Check that the distance between legs can not decrease when pushed together by hand
☐	☐	Lifting column is completely fixed when locking handle is engaged
☐	☐	Emergency stop button is fully operational and interrupts power when engaged. Reset switch
☐	☐	Tool for manual emergency lowering
☐	☐	Electrical emergency lowering
☐	☐	Manual emergency lowering
☐	☐	Hand control (buttons, strain relief on hand control cable, hook, and battery indicator)
☐	☐	Sling bar coupling (swivel joint moves freely and without noise)
		If all points so far are *"OK"*, hoist shall be tested with SWL
☐	☐	Perform one lifting cycle with weight equal to SWL (see product label for value kg/lbs). Motor and spindle must not slip when loaded (causing lifting arm to lower), and movement must be smooth and even
☐	☐	Leg adjustment mechanism, outer and inner position with SWL
☐	☐	Perform new visual control; Damage, play and deformations as described above. Any damaged parts must be repaired or replaced and test is repeated once more until the hoist performs correctly
☐	☐	Charger is operational

OK	*Not OK*	
☐	☐	Reset Periodic inspection by pressing the up- and down buttons on the hand control for 12 seconds (after reset service light is off)

Accessories:

Performed by

Full name:

Date/Place:

Signature:

☐ Approved without faults

Next inspection (YYYY/MM): ..... / .....

☐ Hoist is marked with "Out of order" and sent for repair


☐ Hoist is not eligible for repair and taken out of service

If periodic inspection reveals any defect, wear or other damage that jeopardises the safety of the patient the hoist may not be used until the deficiency has been eliminated

☐ The owner is notified

Due to legal requirements this document or a copy must be filed with the owner's service log book

If approved without faults, apply Periodic inspection label and mark with month and year for **next** Periodic inspection. When ordering label, use item no. 1100306

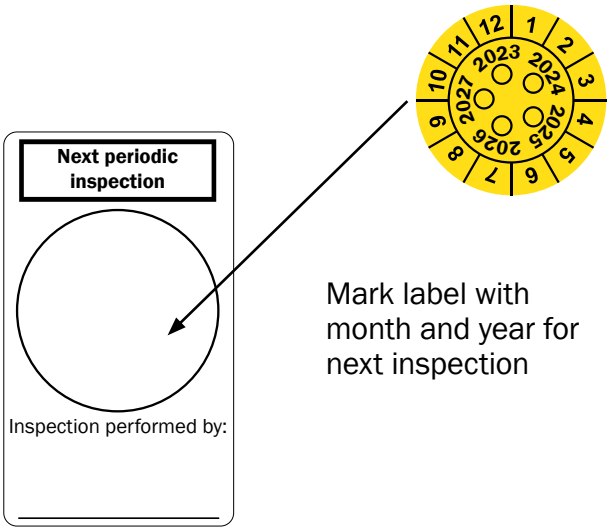

Notes and observations

UK REP

Etac Ltd.
Unit 60, Hartlebury Trading Estate,
Hartlebury, Kidderminster,
Worcestershire, DY10 4JB
+44 121 561 2222

CH REP

Promefa SA
Avenue de Morges 33
1027 Lonay, CH
+41 44 872 97 79

Etac A/S
Parallelvej 3
DK-8751 Gedved

+45 796 858 33
patienthandling@etac.com
www.etac.com

molift®
by Etac